

Fokker 70 Welsh Models¹ vacuum kit

Monoplane passenger

Scale 1:144



Welsh Models 1-144 SKYLINER SERIES



FOKKER 70

kit No SL56C




Welsh Models 1-144 SKYLINER SERIES



FOKKER 70

kit No SL56C

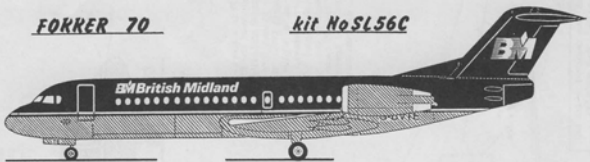


- ASSEMBLY:**
1. Glue fuselage bulkheads into position using Loctite Superglue Extra - see drawing for ref.
 2. Assemble fuselage, wing, tailplane & engine halves. Engine halves to include jet fans - see drawing for location. Cut out engine intake.
 3. Sand and fill where required with Milliput or similar.
 4. superglue metal undercarriage into place.

POKKER 100
G-BVJA to G-BVTD
POKKER 70
G-BVTE to G-BVTC

Two window options are available:-
1. Use decals provided - see drawing for position.
2. To open up window areas use window decal as a guide. Place decal to both sides of fuselage - see drawing for location. When dry draw a pencil line top, bottom & sides. Remove decal & drill a small hole in the centre of each window position and file to shape. Fill windows with Kristal Kleer.

Cut out all parts with a sharp modelling knife allowing half an inch around each part. Rub down all parts on flat side by using wet & dry paper pinned to a flat surface until a centeline joint is achieved on all double sided parts. Before assembling the fuselage halves weight must be added to the nose section, i.e. lead or clay.

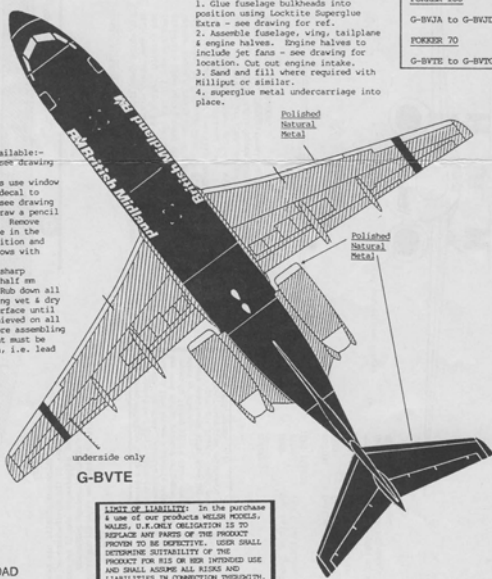

LIMIT OF LIABILITY: In the purchase & use of our products WELSH MODELS, U.K. ONLY OBLIGATION IS TO REPLACE ANY PARTS OF THE PRODUCT PROVEN TO BE DEFECTIVE. USDR SHALL DETERMINE SUITABILITY OF THE PRODUCT FOR USE OR REP. IMPROVED USE AND SHALL ASSUME ALL RISK AND LIABILITY IN CONNECTION THEREWITH. NOT SUITABLE FOR PERSONS UNDER 15 YEARS OF AGE.

WELSH MODELS
93 FONMON PARK ROAD
RHOOSE, BARRY
SOUTH GLAM. CF62 3BG U.K.
Tel/Fax: (01446) 710113



FRAMING NOTE:
As one fuselage panel has been used - 2.25mm - in the manufacture of this kit slight adjustments should be made to the size of the fuselage bulkheads. Frame experts, hold me down circumstances.

DECAL APPLICATION:-
Fit white chestline to both sides of fuselage. When completely dry apply the precise colour - see drawing. Apply BM logo - white logo for fuselage and fit the tailband on the nose. To avoid the blue background showing through the orange logo - apply one on top of other. Fit to both sides of fuselage BRITISH MIDLAND titles, door outlines, door detail, window titles, three Jack flag (3 applications - white, blue & red), Fokker badge (on three panels), wing walkways, axle, black wing stripes, registration (using underside only), built here badge, window and windows. Apply remainder of decals - see drawing for position.

When using modelling tools & knives care should be taken - these are used on painted surfaces. Plastic parts may have sharp points or jagged edges caused by filing with a file, never sand or whittle.



This decal sheet has been designed to fit our POKKER 100 and 70 series. When applying check-line for the 70 series they require some adjustment to length - see drawing.

DECALS:
DEEP HOLE Top half of fuselage, fit & tailplane.
(P1 15/16)
MIDLINE Middle half of fuselage, engine nacelles & wing.
GUEST Landing edge of wing, engine nacelles & tail planes.

1-144

<introductory text>

	<i>Ref.</i>	<i>1:144</i>	<i>model</i>
<i>Span</i>	m	mm	mm
<i>Length</i>	m	mm	mm
<i>Height</i>	m	mm	mm
<i>Engine</i>			
<i>Crew</i>			
<i>Armament</i>			

Cockpit

<text>

Fuselage

<text>

Wing

<text>

Undercarriage

<text>

Final assembly

<text>

References

1. <first>
2. <second>

¹ <web adress of kit producer>www.xxx.yyy